

Pearson Easy Pen User Manual

Introduction

- I. Package contents
- II. Safety tips
- III. Important notices
- IV. Function details

Getting Started

- I. Charging Easy Pen
- II. Get ready to play with Easy Pen
- III. Easy Pen in read mode
- IV. Easy Pen in game mode

Trouble-shooting

Please read this User Manual before using Easy Pen.

Pearson Education Asia Limited
September 2013

Introduction

Welcome to using Pearson Easy Pen!

I. Package contents

Your Pearson Easy Pen Pack contains the following items:

- Easy Pen
- User Manual
- USB Cable
- Warranty Card

II. Safety tips

To prevent damage to your Easy Pen or injury to yourself or to others, please read the following safety tips before using Easy Pen.

1. Not suitable for children under the age of 3 due to small parts.
2. Adult supervision is required when using Easy Pen.
3. Generally, it is not necessary to charge Easy Pen before first use.
4. When the low battery signal (red Status Indicator) is on, please charge it by connecting Easy Pen to your computer using the PC's USB port and the included USB cable.
5. Check USB connector and USB cable regularly to ensure no damage occurs.
6. If any damage occurs, stop using Easy Pen and contact the Pearson Easy Pen Service Centre immediately for inspection.
7. Do not apply excessive force or attempt to dismantle and repair Easy Pen on your own.
8. Do not expose Easy Pen to excessive sunlight, high temperature, high pressure, moisture, strong static electricity or intense magnetic power.

III. Important notices

WARNING: TO PREVENT OR REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE EASY PEN TO ANY FORM OF MOISTURE.

Easy Pen

1. Pearson will not be held liable for any damages resulting from the attempt of dismantle of the product by the user.
2. Keep Easy Pen away from strong sunlight or high moisture areas, such as bathroom.
3. Keep food and beverages away from the product.
4. Do not spill liquid of any kind on this product as it may render it inoperative.
5. Disconnect from USB cable before cleaning.
6. Do not clean any part of Easy Pen with benzene, thinner, detergent or other chemical solvent as this may cause permanent damage that is not covered by the warranty. When necessary, clean it with a slightly damp cloth (with cold water).
7. Allow to dry before use.
8. Avoid dropping the product.
9. Never try to dismantle it.

USB cable

1. Use the USB cable provided by Pearson only for charging the product or downloading data from the computer.
2. Using any other cable may exceed the limits by FCC and other regulatory emissions.
3. USB connectors and cable used with Easy Pen must be regularly examined for damage at the cord, plug and other parts and, in the event of such damage, the cable must not be used until the damage has been repaired.

Electro-Magnetic interference

The normal function of Easy Pen may be disturbed by strong electro-magnetic interference. If so, simply use the tip of a pencil to press the Reset button on Easy Pen to resume normal operation. In case the problem persists, please try using Easy Pen in other areas on the page.


Protect your hearing

1. Long-term exposure to loud sounds may result in permanent hearing loss. When using headphones or ear buds, it is recommended to set the volume of Easy Pen to a lower range, and listen for short periods of time.
2. Turn the volume down immediately if you cannot hear people speaking near you.
3. Limit the play time to 30 minutes, followed by a quiet period. If you experience ringing in your ears or hear muffled speech, stop listening immediately and have your hearing checked as soon as possible.
4. When using Easy Pen without headphones or ear buds, do not hold it near the ears for listening.


Pearson Easy Pen User Manual

IV. Function details

[Model: EP1]

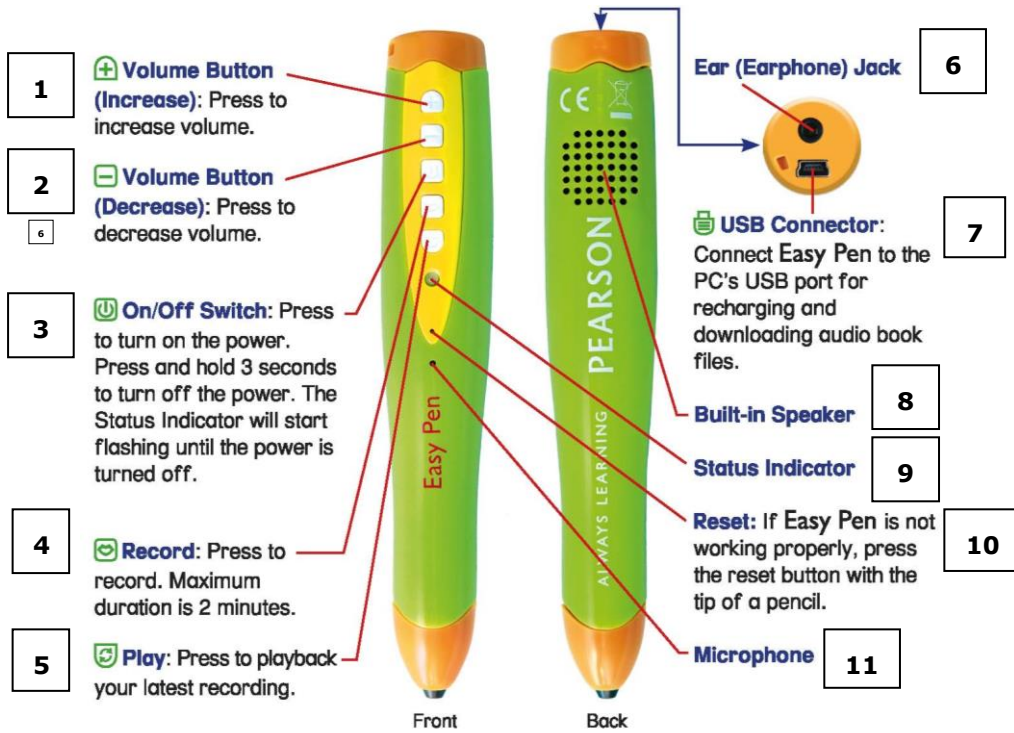

[Model: EP2]

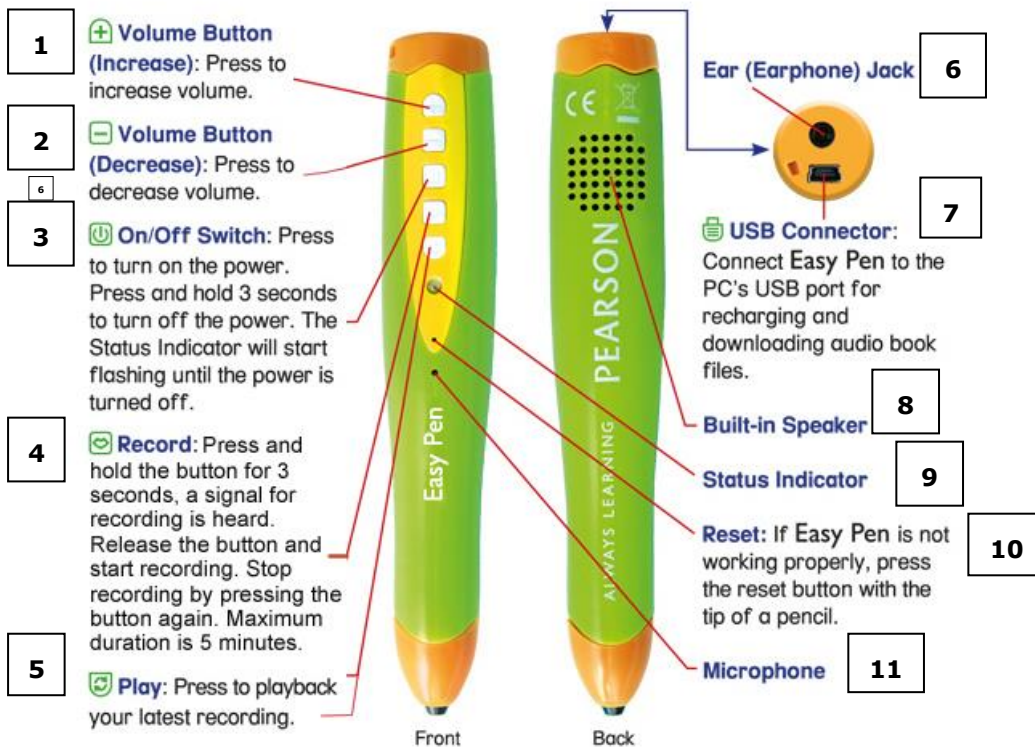

Pearson Easy Pen User Manual

Function items		Description
1	Volume Button (Increase)	Press to increase volume - You will hear 'Increase volume' When the volume is in maximum level, a 'beep' sound is heard
2	Volume Button (Decrease)	Press to decrease volume - You will hear 'Decrease volume' When the volume is in minimum level, a 'beep' sound is heard
3	On/Off Switch	Press to switch on Easy Pen - You will hear 'Hello! Have fun using the Pearson Easy Pen!' when you switch on Easy Pen To switch off Easy Pen, hold the On/Off Switch for 3 seconds - You will hear 'Goodbye' when you switch off Easy Pen
4	Record Button	[Model: EP1] 1. Press to start recording 2. After hearing the word 'Record', speak to the built-in microphone 3. Press the button again to stop recording and a 'beep' sound is heard 4. Press the button to record again and overwrite the previous track [Model: EP2] 1. Press and hold the Record button for 3 seconds. 2. A signal "The pen is now in record mode. Release the button and start your recording." for recording is heard. 3. After hearing the word 'Record', speak to the built-in microphone 4. Press the button again to stop recording and a 'beep' sound is heard 5. Press the button to record again and overwrite the previous track
5	Play Button	1. Press the button to playback the latest recording 2. Press again to replay the recording
6	Ear (Earphone) Jack	For connecting the earphones
7	USB Connector	Connect Easy Pen to the PC's USB port with the provided USB cable
8	Built-in Speaker	High performance speakers for audio playback
9	Status Indicator	Show different status of Easy Pen with red or green light in

Pearson Easy Pen User Manual

		blinking patterns
10	Reset	Press with the tip of a pencil to reset Easy Pen hardware
11	Microphone	For recording

1. Battery and power

- Built-in Li-ION rechargeable battery.
- No external batteries required.
- Easy Pen cannot be operated while charging.
- When the battery power is very low, the red Status Indicator will blink for 15 seconds and then switch off automatically with a continuous 'beep' sound.
- The full charging time for Easy Pen is around 3 hours.
- The playing time of the fully charged unit is about 2 hours at default volume.
- Easy Pen will automatically switch off after 10 minutes of inactivity. Before that, you will hear 'Goodbye'.

2. Volume

- Total 7 volume levels.

3. Record

- Recording capacity: 2 minutes [Model: EP1]; 5 minutes [Model: EP2].
- The recording will be stopped with a 'beep' sound when time is up.
- Only one and the latest recording can be saved in the unit.
- The red Status Indicator blinks once per second while recording.

4. Play

- Only one and the latest recording can be played.
- Press On/Off Switch or Record button to stop the playback.
- The red Status Indicator blinks 8 times per second while playing back the recording.

Pearson Easy Pen User Manual

5. Status Indicator

- In operating mode:

Status	Status Indicator
Just switch on	Green light blinking fast (8 times per second)
Reading text or images	Green light blinking fast (8 times per second)
Recording	Red light blinking slow (once per second)
Playing back	Red light blinking fast (8 times per second)
Standing by (idle)	Green light blinking slow (once per second)
Not enough battery	Red light is on

- In charging mode:


Status	Status Indicator
Just connected to the computer	Green light blinking fast (8 times per second, lasts for 2 seconds)
Transferring data	Green light blinking fast (8 times per second)
Standing by (idle)	Green light blinking slow (once per second)
Charging	Red light is on
Completely charged	Red light is off

Getting Started

I. Charging the Battery

1. Generally, it is not necessary to charge Easy Pen before first use. When the low battery signal is on (red Status Indicator), please connect Easy Pen to your PC's USB port with the provided USB cable.
2. When the battery is fully charged, the Status Indicator will change from 'red' to 'green'.

II. Get ready to play with Easy Pen

1. Press the On/Off Switch to turn on the power.
2. Before reading the book, point to the  icon on the book cover to load the relevant information of that book.
3. Point to the text to start reading.
4. Besides pointing to the text and images, you can also point to different icons in the book to read stories, play songs and games.

III. Easy Pen in read mode

1. By default, Easy Pen is in read mode.
2. Point to the words and sentences to listen to the pronunciations.
3. Point to the pictures to listen to the pronunciations or sound effects.
4. Point to the icons to listen to stories, play songs and games.
(For the functions of icons, please refer to the introduction on the back cover of the book.)

IV. Easy Pen in game mode

1. Point to the game icon to activate game mode.
2. Follow the voice instruction and play the game with Easy Pen.
3. There are 3 ways to exit game mode:
 - Point to **all** correct answers and complete the game. When the game is completed, you will hear 'Game done!' or 'End of game!'.
 - After 5-20 consecutive trials of incorrect answers, it will switch from game mode to read mode automatically. You can also hear 'Game done' or 'End

Pearson Easy Pen User Manual

of game!'.
of game!'.

- Point to the Easy Pen logo on the front book cover and reset to read mode.

Trouble-shooting

Below are the possible causes or remedies of some common problems. Do not attempt to dismantle and repair the product by yourself. This will invalidate your warranty. If the problem persists, please call our technical support hotline.

Symptom	Try this
No response upon the On/Off Switch button is pressed	<ul style="list-style-type: none"> ● Make sure the battery of Easy Pen is fully charged ● Try to connect Easy Pen with your computer with the USB cable
No response when pointing to the book content	<ul style="list-style-type: none"> ● Make sure you have used the correct book ● Make sure book pages are free from dirt ● Switch off Easy Pen and then on again ● Try to import the relevant audio files into Easy Pen again ● Press 'Reset' button ● Synchronize the software with Pearson Easy Pen Connector
No signals or no sounds suddenly	<ul style="list-style-type: none"> ● Switch off Easy Pen and then on again ● Make sure the battery of Easy Pen is fully charged ● Try to import the data into Easy Pen again ● Adjust the volume ● Press 'Reset' button ● Synchronize the software with Pearson Easy Pen Connector
Easy Pen does not turn on or does not respond	<ul style="list-style-type: none"> ● Make sure the On/Off Switch is pressed

The product details may be subject to change without prior notice in order to improve reliability, design or function.